




# Hipstreet Titan Plus Camera Replacement

If your camera is not working, this guide will walk you through the process of replacing it in this device.

Written By: Kari Cannon

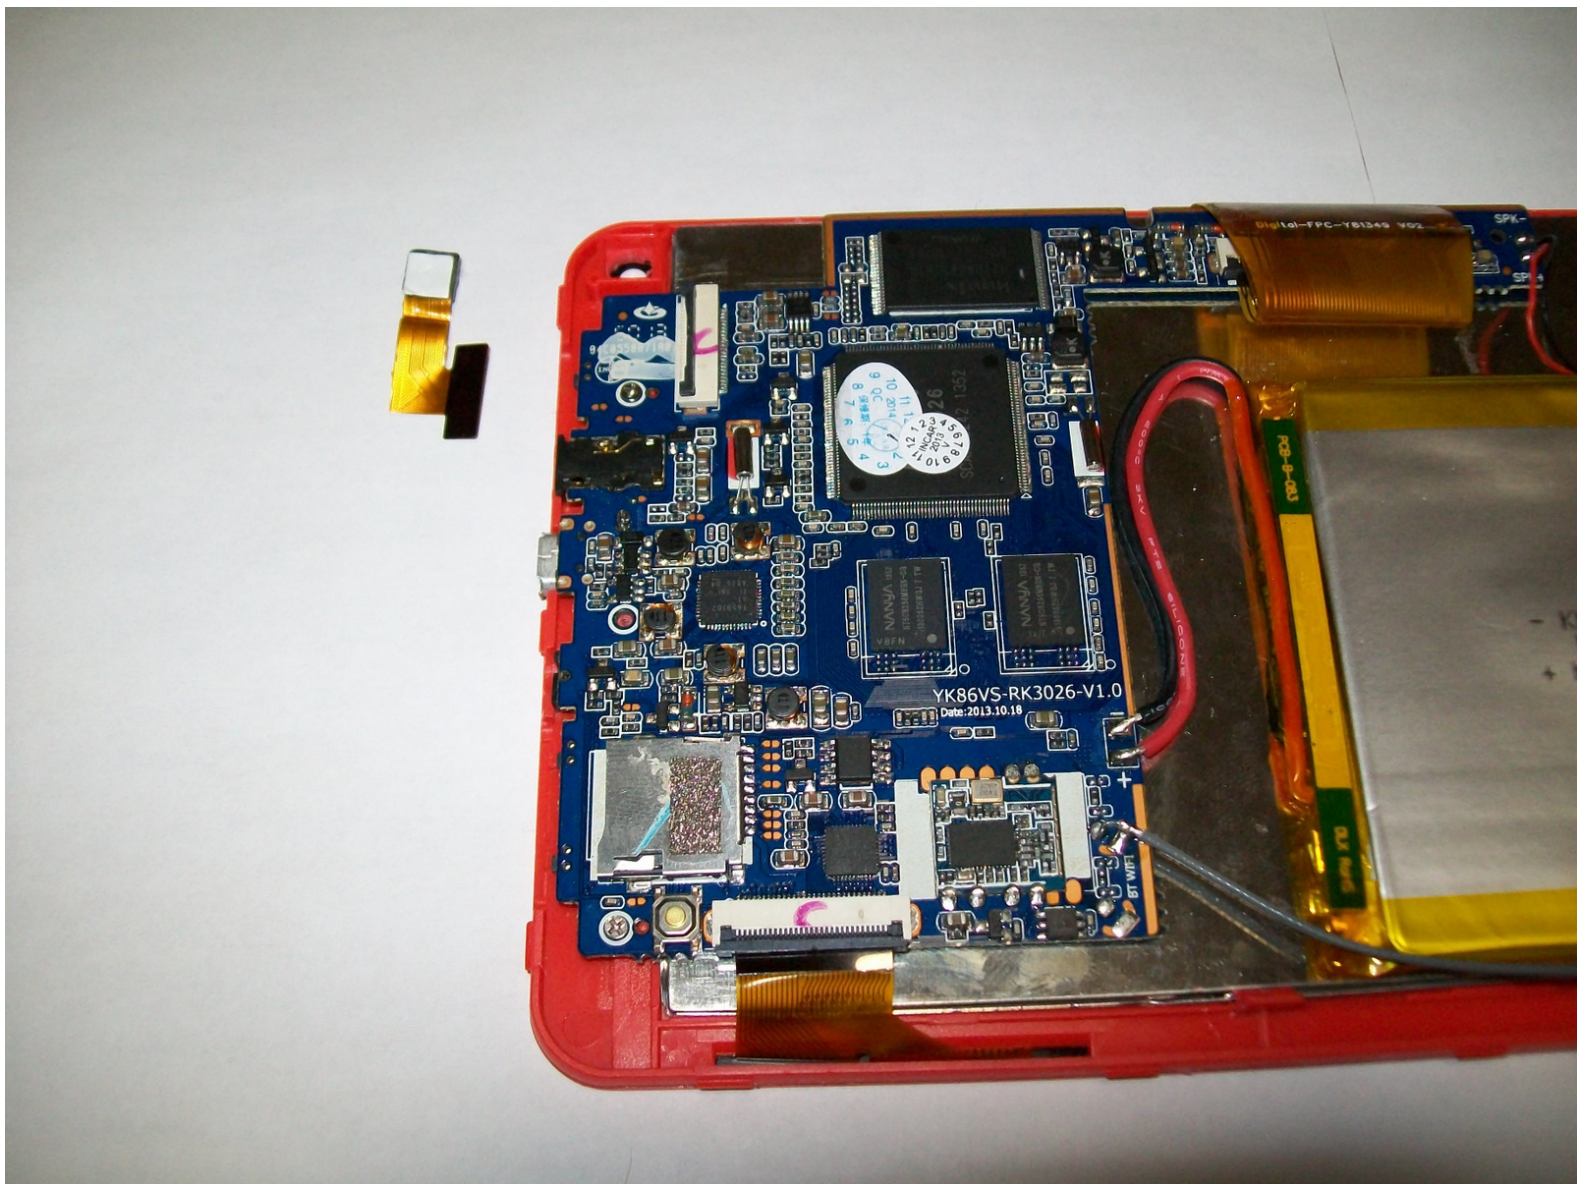

## INTRODUCTION

This camera replacement guide demonstrates how to remove the necessary components to access the camera. Replacing the camera is a simple four step process using the necessary tools.

---



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Camera



- Use the plastic opening tools to pry open the back case of the device.


## Step 2

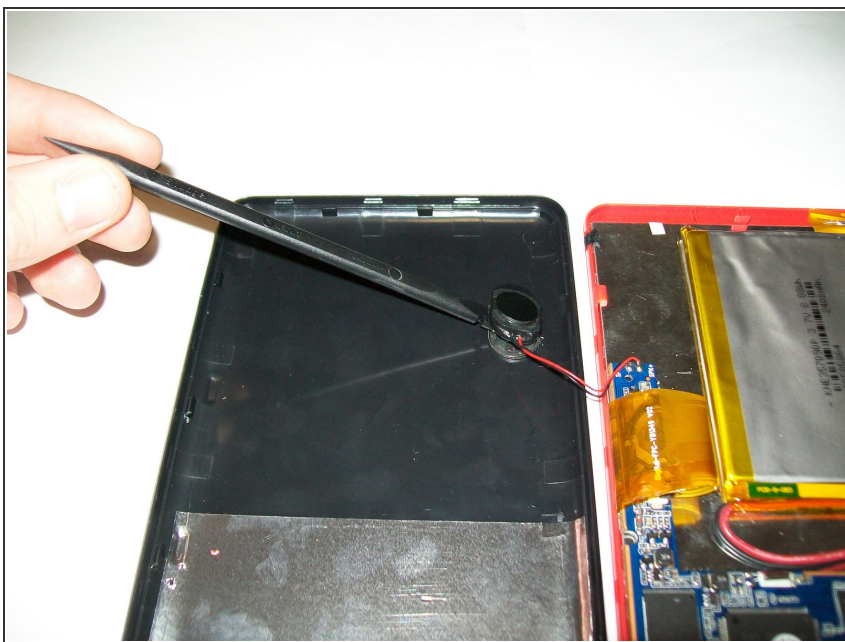

- Use spudger to remove the speaker from the back casing of the device.





## Step 3

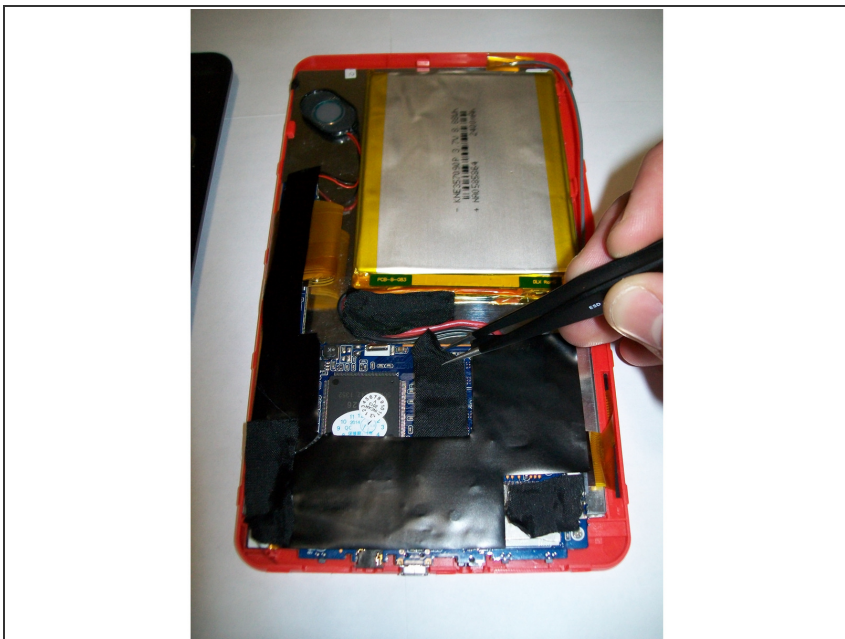

- Use tweezers to remove the black adhesive strips from the wires. Set aside

## Step 4

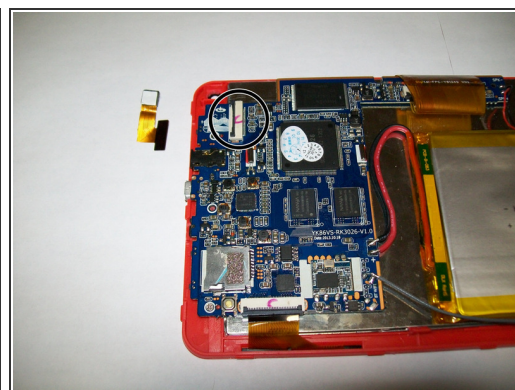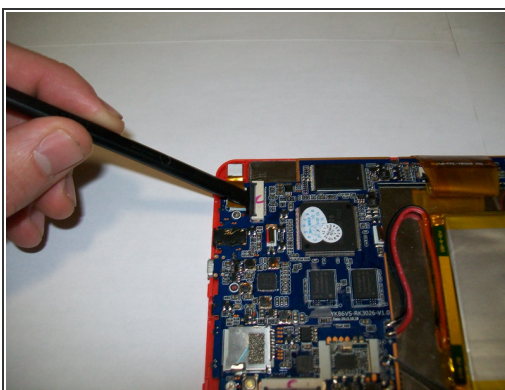

- Use a spudger to undo the black clip connecting the camera wires to the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-02 07:58:33 AM.